



RODAVIGO, S.A.
RODAMIENTOS VIGO, S.A.

www.rodavigo.net

+34 986 288118
Servicio de Att. al Cliente



XP Pressure Monitor Kit

Provides Ratio Assurance for Graco XP70™ Sprayers



On-ratio spraying means peace of mind

- Provides assurance that your XP70 is spraying accurately and on-ratio
- Improved efficiency means you get it done right the first time and within the scheduled timeframe
- Reduced rework saves you labor and material costs
- Improved quality control – you have more confidence in end results
- Easily retrofits to any XP70 – can be installed in less than 20 minutes

PROVEN QUALITY. LEADING TECHNOLOGY.



The XP Pressure Monitor Kit includes:

- Local Control Module – displays A & B pressures while you're spraying
- Air solenoid to motor
- Light tower – indicates sprayer status
- Electrical box
- Pressure transducers

Ordering Information

- 262940** Pressure monitor kit,
wall powered* with light tower
- 262942** Pressure monitor kit,
air powered* with light tower
- 16H378** Membrane shield, 10-pack
- 16J717** Protective bag
- 16G410** Pressure Transducer Tee Adapter.
For using the pressure transducers
on systems other than an XP
Sprayer.
- 3A1331** Manual - XP Pressure Monitor Kit

* Not approved for use in explosive atmospheres.

©2011 Graco Inc. 348546A 8/11 All other brand names or marks are used for identification purposes and are trademarks of their respective owners. All written and visual data contained in this document are based on the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

Take control of protective coatings projects with the XP Pressure Monitor Kit

With an optional XP Pressure Monitor Kit installed on your Graco XP70 Plural-Component Sprayer, you have the assurance that you're spraying on-ratio. If off-ratio conditions occur, the sprayer automatically shuts down. The monitor detects off-ratio conditions including:

- Running out of material
- Pump cavitation
- Packing failures
- Leaks in valves or fittings
- Plugged filters

How it works

Two pressure transducers read the A and B fluid pressures in the outlet manifold and send the readings back to the Local Control Module. When A to B differential spray pressure is out of tolerance, the air solenoid shuts off the air supply to the proportioner. The light tower will indicate an alarm has occurred, and the alarm code appears on the LCM display.



Contact us today!

For more information, call **1-877-844-7226**
or visit us online at www.graco.com