



Index chapter 4

AIR TREATMENT

Series UZ

Filter UZF G 1/4.....	page	4.2
Pressure reducer UZRR G 1/4.....	page	4.3
Filter reducer UZRRM /F G 1/4.....	page	4.4
Lubricator UZL G 1/4.....	page	4.5
Soft-start valve UZAP G 1/4.....	page	4.6
Automatic soft-start valve UZAP /A4 G 1/4.....	page	4.7
Shut - off valve UZVL G 1/4.....	page	4.7
Filter reducer + lubricator G 1/4.....	page	4.8
Filter + reducer + lubricator G 1/4.....	page	4.9
Accessories: mounting brackets.....	page	4.10
intermediate air intake.....	page	4.10
assembling screws.....	page	4.10
Example of assembly.....	page	4.10

Series RRP

Precision pressure reducer RRP G 1/4.....	page	4.11
---	------	------

Series EZ

Filter EZF G 3/8 - G 1/2 - G 1.....	page	4.12
Pressure reducer EZRR G 3/8 - G 1/2 - G 1.....	page	4.14
Filter reducer EZRR /F G 3/8 - G 1/2 - G 1.....	page	4.16
Lubricator EZL G 3/8 - G 1/2 - G 1.....	page	4.18
Soft-start valve EZAP G 3/8 - G 1/2 - G 1.....	page	4.20
Shut - off valve EZVL G 3/8 - G 1/2 - G 1.....	page	4.22
Filter reducer + lubricator G 3/8 - G 1/2 - G 1.....	page	4.23
Filter + reducer + lubricator G 3/8 - G 1/2 - G 1.....	page	4.24
Accessories: mounting brackets.....	page	4.25
intermediate air intake.....	page	4.25
assembling screws.....	page	4.25
Example of assembly.....	page	4.25

Series EPR

Pressure proportional valves G 1/8 - G 1/4 - G 1/2.....	page	4.26
Accessories: flanges.....	page	4.29
connectors.....	page	4.29

Series MA

Air treatment accessories: manometers.....	page	4.30
--	------	------

Series PR

Air treatment accessories: digital/analog pressure switch series PRDA.....	page	4.31
Air treatment accessories: diaphragm pressure switch series PRC-PRA.....	page	4.32
Air treatment accessories: contacts exchange pressure switch series PRCA.....	page	4.33