


RACCORDO PORTAGOMMA PER TUBO AUTOBLOCCANTE

HOSE ADAPTER FOR LOCKING HOSE SELF
EINSCHRAUBTÜLLE FÜR STECKSCHLÄUCHE
DOUILLES ANNELÉES RAPIDES POUR TUYAUX AUTO-SERRANTS
RACORDAJE PORTAGOMA PARA TUBO AUTOBLOCANTE
CONEXÃO ESPIGÃO PARA TUBO AUTOBLOCANTE

13800

RACCORDO PORTAGOMMA FEMMINA PER TUBO AUTOBLOCCANTE

FEMALE HOSE ADAPTER FOR LOCKING HOSE SELF
SCHNELLSTECKTÜLLE FÜR UNIVERSAL VERSCHSCHRAUBUNG
ÉCROU R.U. AVEC DOUILLE ANNELEE POUR TUYAUX AUTO-SERRANTS
RACORDAJE PORTAGOMA HEMBRA PARA TUBO AUTOBLOCANTE
CONEXÃO ESPIGÃO FÊMEA PARA TUBO AUTOBLOCANTE

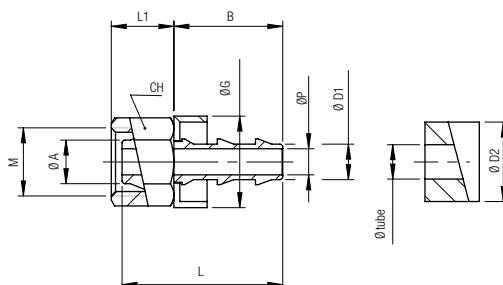

Montaggio
Assembling
Montageanleitung
Assemblage
Montaje
Montagem

Code	Tube	M	Ø A	Ø D1	Ø D2	CH	Ø G	L	B	L1	Ø P	Pack.
13800 00 001	1/4	M10x1	6	6.5	13	12	16.7	32.5	20	11.5	4.8	10
13800 00 002	1/4	M12X1	8	6.5	13	14	16.7	29.5	20	12.5	4.8	10
13800 00 003	1/4	M16x1.5	10	6.5	13	19	16.7	30.5	24	14	4.8	10
13800 00 004	3/8	M16x1.5	10	9.5	16	19	19.5	34.5	24	14	7.5	10
13800 00 005	3/8	M20x1.5	14	9.5	16	24	19.5	36	28	15	7.5	10
13800 00 006	1/2	M20x1.5	14	12.7	19	24	23.5	40	28	15	10	10
13800 00 007	1/2	M24x1.5	18	12.7	19	30	23.5	40.5	36.5	17	10	10
13800 00 008	5/8	M24x1.5	18	15.7	23	30	27.3	49	36.5	17	13.5	10
13800 00 009	3/4	M30x1.5	22	18.8	27	36	30.8	57.5	43	17	16	10



IT

Su ogni articolo della serie 13000 è possibile sostituire dado e ogiva con 13800. Vedi "Ø A" come riferimento.

GB

For each item of the 13000 serie, you can remove the nut and the olive and connect with the art. 13800. See "Ø A" for nut size.

DE

Auf jedes Artikel der Serie 13000 kann man die Überwurfmutter und Klemmring mit dem Artikel 13800 ersetzen. Für die Auswahl Siehe "Ø A" Rohrdurchmesser.

FR


Pour chaque article de la série 13000, possibilité de substituer l'écrouet l'ogive avec le code 13800. Se reporter au "Ø A" pour diamètre écrou.

ES

Para cada artículo de la serie 13000 es posible de sustituir la tuerca y el bicono con 13800. Ver "Ø A" como referencia.

PT

Para cada item da série 13000 é possível fazer a substituição da porca e da anilha pelo item 13800. Veja "Ø A" para referência.

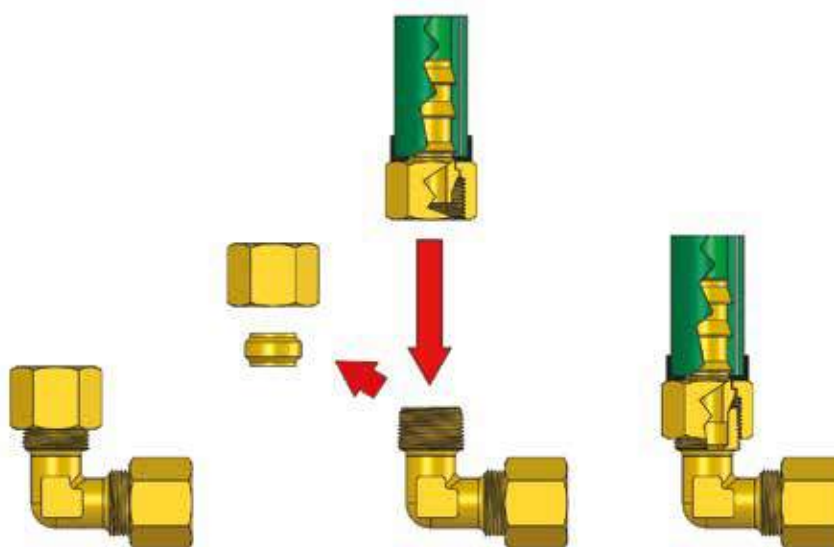

13810**RACCORDO PORTAGOMMA MASCHIO PER TUBO AUTOBLOCCANTE**


MALE HOSE ADAPTER FOR LOCKING HOSE SELF

SCHNELLSTECKTÜLLE MIT AUSSENGEWINDE

DOUILLE ANNELEE RAPIDE POUR TUYAUX AUTO-SERRANTS

RACORDAJE PORTAGOMA MACHO PARA TUBO AUTOBLOCANTE

CONEXÃO ESPIGÃO MACHO PARA TUBO AUTOBLOCANTE

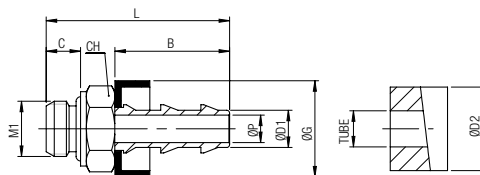

Montaggio
Assembling
Montageanleitung
Assemblage
Montaje
Montagem

Code	Tube	M1	Ø D1	Ø D2	CH	Ø G	L	B	C	Ø P	Pack.
13810 00 001	1/4	1/8	6.5	13	13	16.7	32	20	6	4.8	10
13810 00 002	1/4	1/4	6.5	13	17	16.7	35.5	20	8	4.8	10
13810 00 003	3/8	1/4	9.5	16	17	19.5	39.5	24	8	7.5	10
13810 00 004	3/8	3/8	9.5	16	22	19.5	41	24	9	7.5	10
13810 00 005	1/2	3/8	12.7	19	22	23.5	45	28	9	10	10
13810 00 006	1/2	1/2	12.7	19	27	23.5	47	28	10	10	10
13810 00 007	5/8	1/2	15.7	23	27	27.3	55	36.5	10	13.5	10
13810 00 008	5/8	3/4	15.7	23	32	27.3	58.5	36.5	12	13.5	10
13810 00 009	3/4	3/4	18.8	27	32	30.8	65	43	12	16	10

13820**NIPPLO**


NIPPLE

DOPPELNIPPEL

MAMELON

MACHÓN

NIPLE

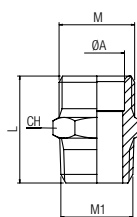

Montaggio
Assembling
Montageanleitung
Assemblage
Montaje
Montagem

Code	M	M1	Ø A	L	CH	Pack.
13820 00 001	M10x1	1/8	6	20	11	10
13820 00 002	M10x1	1/4	6	23,5	14	10
13820 00 003	M10x1	3/8	6	24	17	10
13820 00 004	M12x1	1/8	8	20,5	13	10
13820 00 005	M12x1	1/4	8	24	14	10
13820 00 006	M12x1	3/8	8	24,5	17	10
13820 00 007	M16x1,5	1/4	10	26	16	10
13820 00 008	M16x1,5	3/8	10	26,5	17	10
13820 00 009	M16x1,5	1/2	10	28	21	10
13820 00 010	M20x1,5	3/8	14	26,5	20	10
13820 00 011	M20x1,5	1/2	14	29	21	10
13820 00 012	M24x1,5	1/2	18	31	24	10
13820 00 013	M24x1,5	3/4	18	32,5	27	10
13820 00 014	M30x1,5	3/4	22	33,5	30	10
13820 00 015	M30x1,5	1/2	22	32	30	10