

TI-P004-01

CTLS Issue 8


spirax

sarco

SDP143

Pilot Operated

Pressure Surplussing Valve with Cast Steel Body

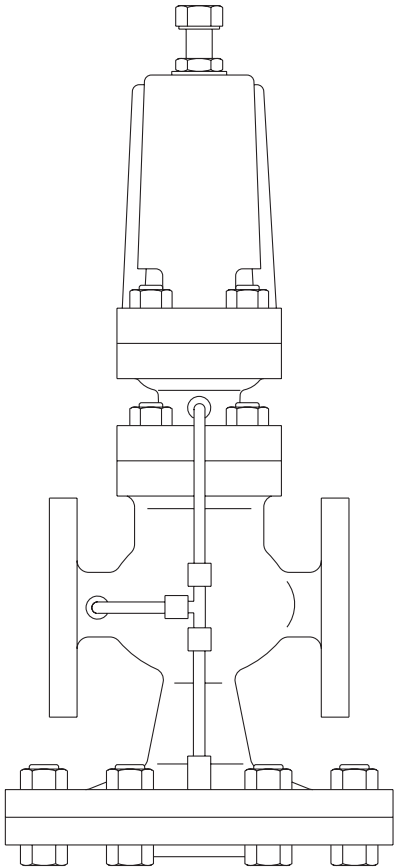

4.6

117

Description

The SDP143 is a cast steel pilot operated pressure surplussing valve suitable for steam, air and industrial gasses (**Note: It is not suitable for oxygen service**). The SDP143 controls by sensing the upstream pressure through a pressure sensing pipe taken from the union **29** which is clearly identified on page 4.

Sizes and pipe connections

DN15LC - Low Capacity version, DN15, DN20, DN25, DN32, DN40, DN50 and DN80.

Flanged to EN 1092 PN40, BS 10 Table 'J', ANSI 300 and ANSI 150.


K_v values

The K_v maximum values shown below are **full** capacities and should be used for safety valve sizing purposes only.

DN15LC	DN15	DN20	DN25	DN32	DN40	DN50	DN80	For conversion: C _v (UK) = K _v x 0.963 C _v (US) = K _v x 1.156
1.0	2.8	5.5	8.1	12.0	17.0	28.0	64.0	

Control systems
Pressure reducing/surplussing valves

Pressure/temperature limits

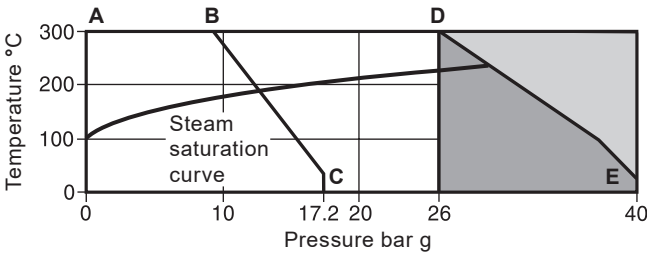

- The product **must not** be used in this region.
- Due to the material strength of the main diaphragm chamber the product must not be used in this region.

A-D-E Flanged EN 1092 PN40, ANSI 300 and BS 10 Table J.


A-B-C Flanged ANSI 150.

Note: Two colour coded pressure adjustment springs are available for the following downstream pressure ranges:

- Red** 0.2 bar g to 17 bar g
- Grey** 16.0 bar g to 24 bar g

Body design conditions		PN40
Maximum design pressure	A-B-C	17.2 bar g @ 40 °C
	A-D-E	Limited to 26 bar g
Maximum design temperature		300 °C @ 26 bar g
Minimum design temperature		0 °C
Maximum upstream pressure for saturated steam service	A-D-E	26 bar g
	A-B-C	14 bar g
Maximum operating temperature		300 °C @ 26 bar g
Minimum operating temperature		0 °C
Note: For lower operating temperatures consult Spirax Sarco		
Maximum differential pressure	A-D-E	26 bar
	A-B-C	14 bar
Designed for a maximum cold hydraulic test pressure of:		60 bar g
Note: With internals fitted, test pressure must not exceed:		40 bar g

Materials

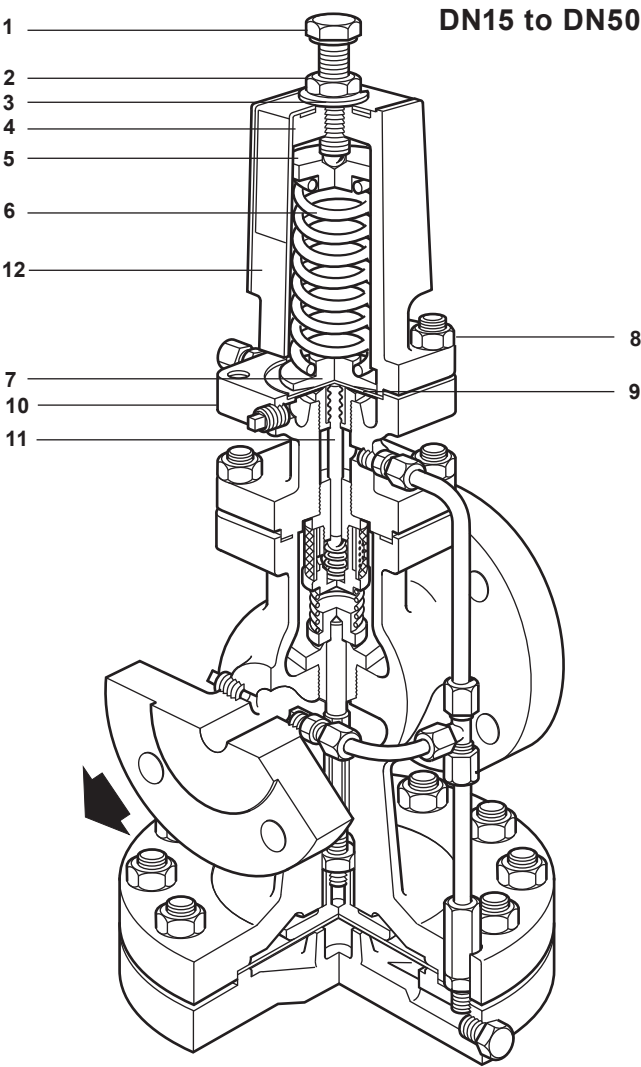

4.6

119

No.	Part		Material	
1	Adjustment screw		Steel	BS 3692 Gr. 8.8
2	Adjustment lock-nut		Steel	BS 3692 Gr. 8
3	'C' washer		Stainless steel	BS 1449 304 S16
4	Spring housing		Cast steel	DIN 17245 GS C25
5	Top spring plate		Steel	BS 970 220 Mo7
6	Pressure adjustment spring		Stainless steel	BS 2056302 S25
7	Bottom spring plate		Steel	BS 970 220 Mo7
8	Spring housing	Securing nuts	Steel	BS 3692 Gr. 8
		Securing studs	Steel	BS 4439 Gr. 8.8
			DN15 to DN80	M10 x 30 mm
9	Pilot diaphragm		Stainless steel	BS 1449 316 S31
10	Pilot valve housing		Steel	DIN 17245 GS C25 GP 240 GH + N
11	Pilot valve plunger		Stainless steel	BS 970 431 S29
12	Spring housing cover		Stainless steel	BS 1449 304 S12


Materials continued on the next page

Control systems
Pressure reducing/surplussing valves


Materials
(continued)

No.	Part	Material		
13	Pilot valve and seat unit	Stainless steel		BS 970 431 S29
14	Internal strainer	Stainless steel		BS 1449 304 S16
15	Body gasket	Stainless steel reinforced exfoliated graphite		
16	Main valve return spring	Stainless steel		BS 2056 302 S25
17	Main valve	Stainless steel		BS 970 431 S29
18	Main valve seat	Stainless steel		BS 970 431 S29
20	Main valve body	Cast steel		DIN 17245 GS C25
21	Pilot valve housing	Securing nuts	Steel	BS 3692 Gr. 8
		Securing studs	Steel	BS 4439 Gr. 8.8
			DN15 and DN20	M10 x 25 mm
			DN25 to DN50	M12 x 30 mm
			DN80	M12 x 40 mm
22	Main diaphragm chamber	Cast steel	DIN 17245 GS C25	
23	Main diaphragm	Securing nuts	Steel	BS 3692 Gr.8
		Securing bolts	Steel	BS 4882 Gr. 2H
			DN15 and DN20	M12 x 50 mm
			DN25 and DN32	M12 x 60 mm
			DN40 and DN50	M12 x 65 mm
			DN80	M12 x 80 mm
24	Main diaphragms	Stainless steel		BS 1449 316 S31
25	Main diaphragm plate	Stainless steel		BS EN 10088-3 1.4307
26	Pushrod	Stainless steel		BS 970 431 S29
27	Control pipe assembly	Stainless steel		BS 3605 304 S14
28	Plug ⅛" BSP	Steel		
29	Pressure pipe union	Steel		
30	Lock-nut	Steel		BS 3692 Gr. 8

Arrangement of main valve assembly as used in sizes **DN40** and **DN50**.

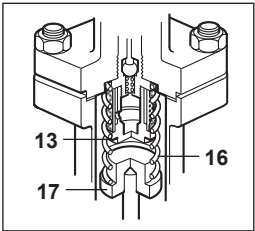


DN15 to DN50

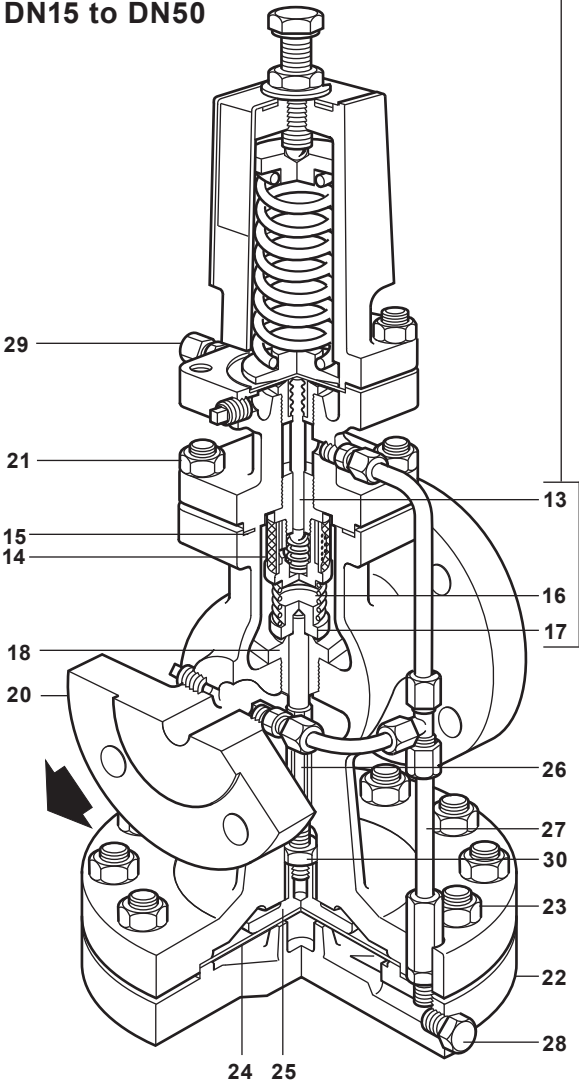

Materials continued on the next page

Materials
(continued)


No.	Part	Material	
45	Body studs	Steel	BS 4439 Gr. 8.8
	Body nuts M12 x 40 mm	Steel	BS 3692 Gr. 2H
46	Upper main diaphragm chamber	Cast steel	DIN 17245 GS C25

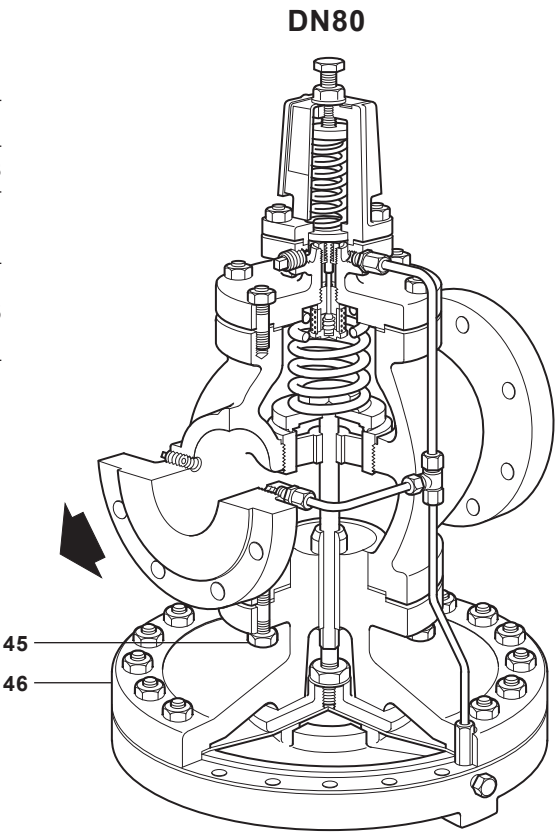

4.6

121

Dimensions/weights (approximate) in mm and kg

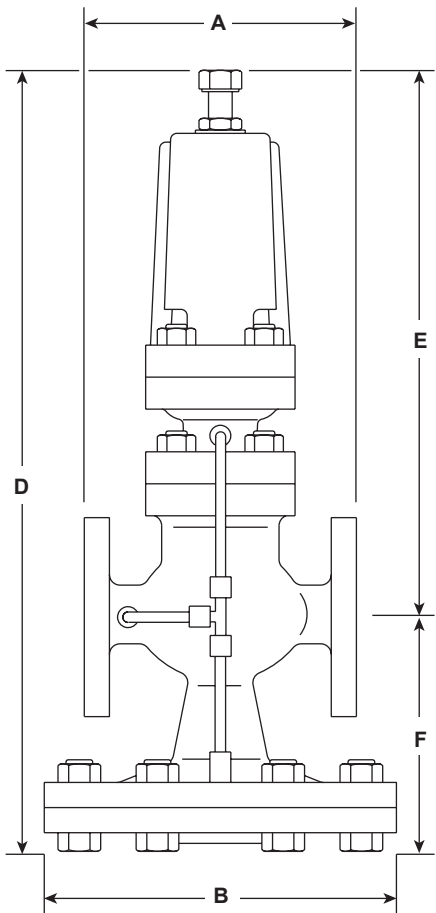


Sizes	EN 1092 PN40 A	ANSI 300 A	ANSI 150 A	BS 10 Table J A	B	D	E	F	Weight
DN15LC	130	130	122	130	175	405	277	128	15
DN15	130	130	122	130	175	405	277	128	15
DN20	150	150	142	150	175	405	277	128	16
DN25	160	160	156	164	216	440	288	152	23
DN32	180	183	176	184	216	440	288	152	25
DN40	200	209	200	209	280	490	305	185	40
DN50	230	236	230	243	280	490	305	185	42
DN80	310	319	310	325	350	580	322	258	103

Control systems

Pressure reducing/surplussing valves

Steam capacities chart

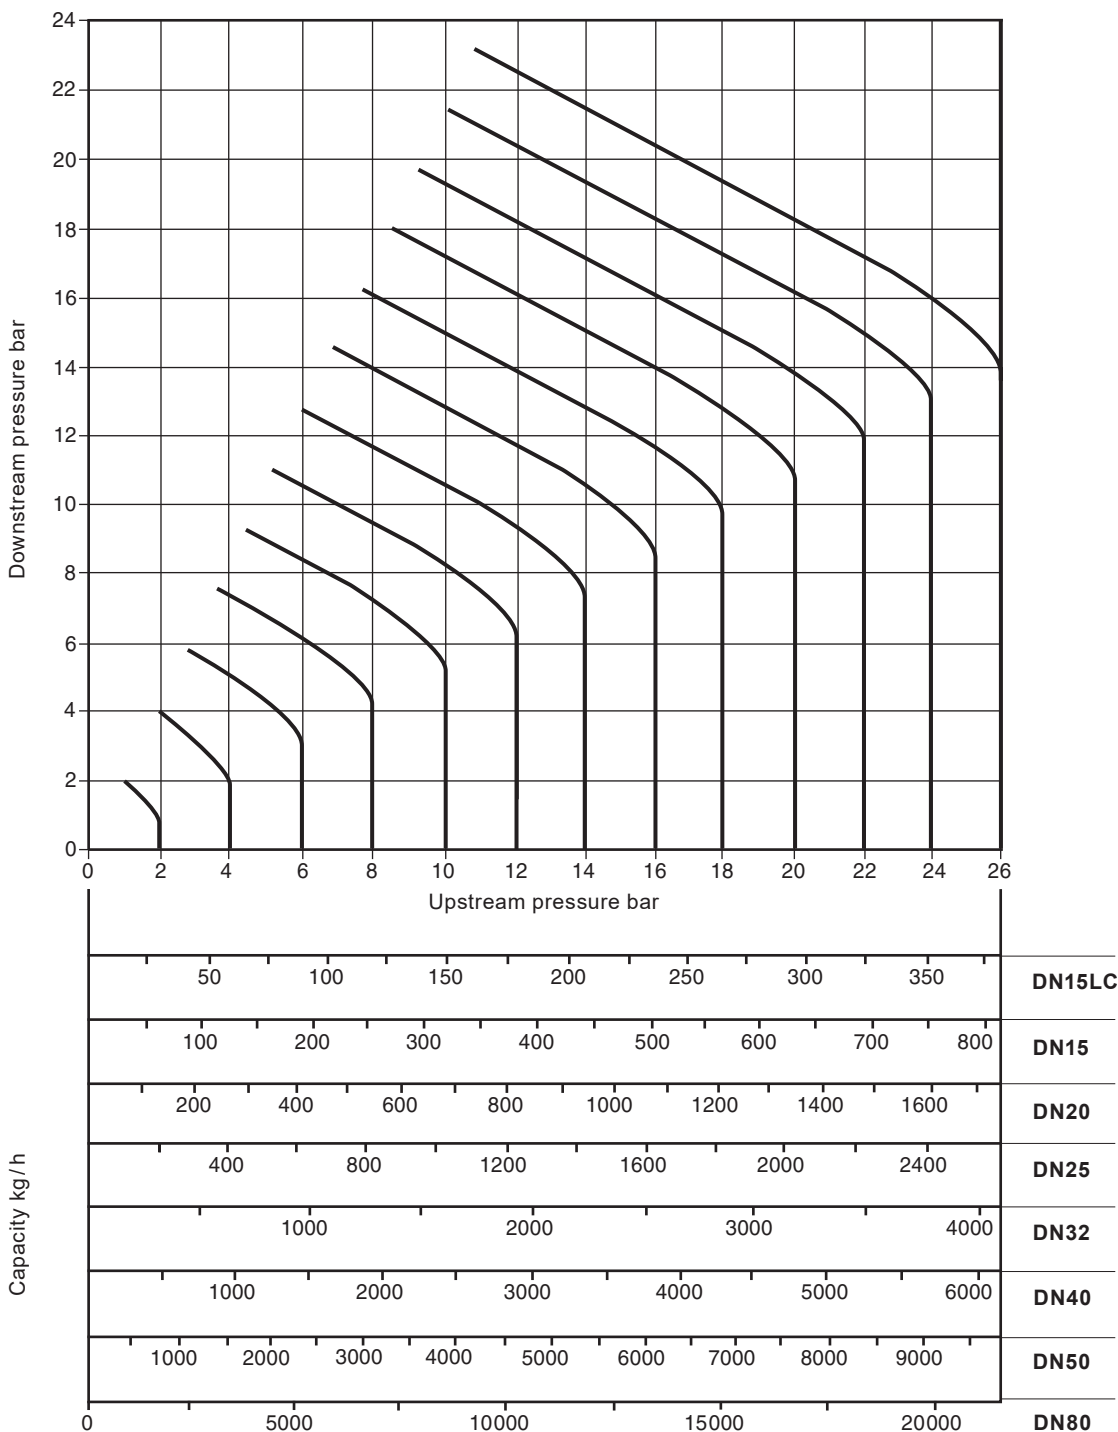

How to use the chart


Saturated steam

A valve is required to pass 600 kg/h reducing from 6 bar to 4 bar. Find the point at which the curved 6 bar upstream pressure line crosses the horizontal 4 bar downstream pressure line. A perpendicular dropped from this point gives the capacities of all DP sizes under these conditions. A DN32 valve, is the smallest size which will carry the required load.

Superheated steam

Because of the higher specific volume of superheated steam a correction factor must be applied to the figure obtained from the chart above. For 55 °C of superheat the factor is 0.95 and for 100 °C of superheat the factor is 0.9. Using the example given for saturated steam, the DN32 valve would pass $740 \times 0.95 = 703$ kg/h if the steam had 55 °C of superheat. It is still big enough to pass the required load of 600 kg/h.

Compressed air capacities chart

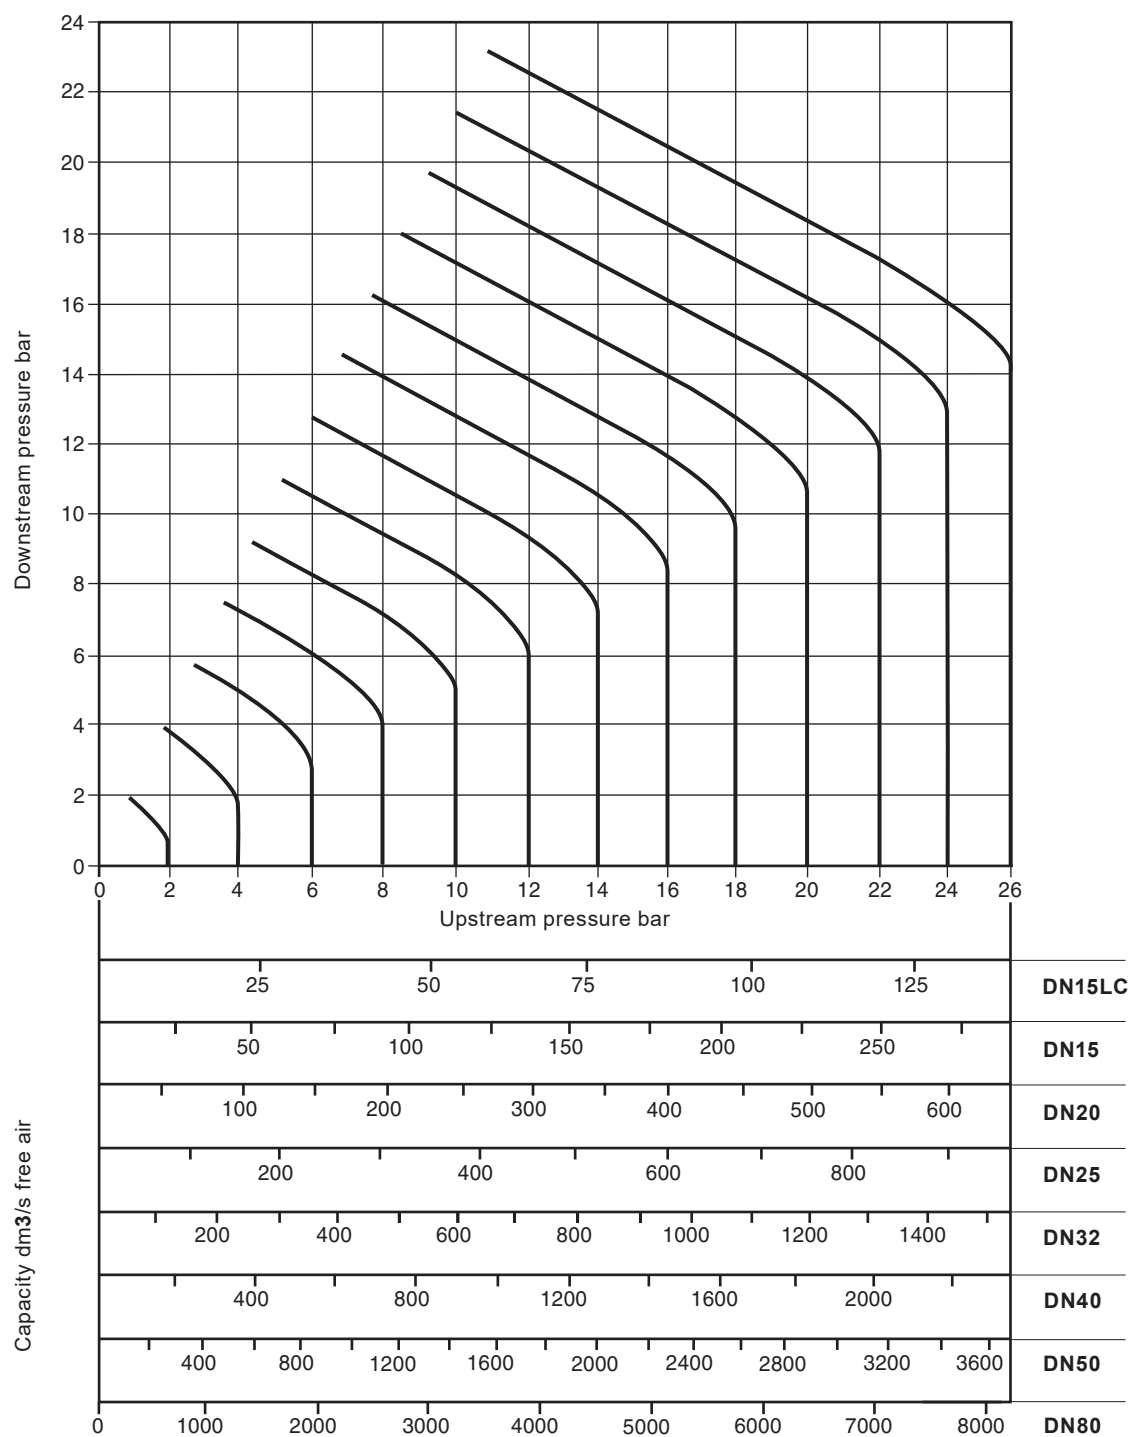

How to use the chart

Capacities are given in cubic decimetres of free air per second (dm^3/s). The use of the capacity chart can be best explained by an example. Required, a valve to pass 100 dm^3/s of free air reducing from 12 bar to 8 bar. Find the point at which the curved 12 bar upstream pressure line crosses the horizontal 8 bar downstream pressure line. A perpendicular dropped from this point shows that whereas a DN15LC valve will only pass 57 dm^3/s and is therefore not large enough, a DN15 valve will pass approximately 120 dm^3/s under these conditions and is the correct valve size to choose.

4

Control systems

Pressure reducing/surplussing valves

Safety information, installation and maintenance
For full details see the Installation and Maintenance Instructions (IM-P004-05) supplied with the product.

Installation note:
The valve should be installed in a horizontal pipeline with the direction of flow as indicated by the arrow on the valve body.

How to order
Example: 1 off Spirax Sarco DN32 SDP143 pilot operated pressure surplussing valve fitted with a red pressure adjustment spring and having flanged EN 1092 PN40 connections.

Spare parts

Available spares


Maintenance kit
A stand-by set of spares for general maintenance purposes and covers all spares marked*

* Main diaphragm	(2 off)		A
* Pilot diaphragm	(2 off)		B
Pilot valve seal assembly			C
* Pilot valve and plunger assembly			D, E
Main valve assembly			F, H
* Main valve return spring			G
Pressure adjustment spring	Red	0.2 to 17 bar	J
	Grey	16 to 24 bar	
* Control pipe assembly			K
* Body gasket	(packet of 3)		O
Set of spring housing securing studs and nuts	(set of 4)		P
Set of pilot valve housing securing studs and nuts	(set of 4)		Q
Set of diaphragm chamber securing bolts and nuts	(set of 10)	DN15 and DN20	R
	(set of 12)	DN25 and DN32	
	(set of 16)	DN40 and DN50	
	(set of 20)	DN80	
Set of main body studs and nuts (DN80)	(set of 6)		T
Pushrod and main diaphragm plate assembly			V, W, X

How to order spares
Always order spares by using the description given in the column headed 'Available spares' and state the size and type of pressure reducing valve.

Example: 1 - Main valve assembly for a Spirax Sarco DN15 SDP143 pilot operated pressure surplussing valve.

How to fit: See Installation and Maintenance Instructions supplied with the pressure reducing valve. Further copies are available on request.

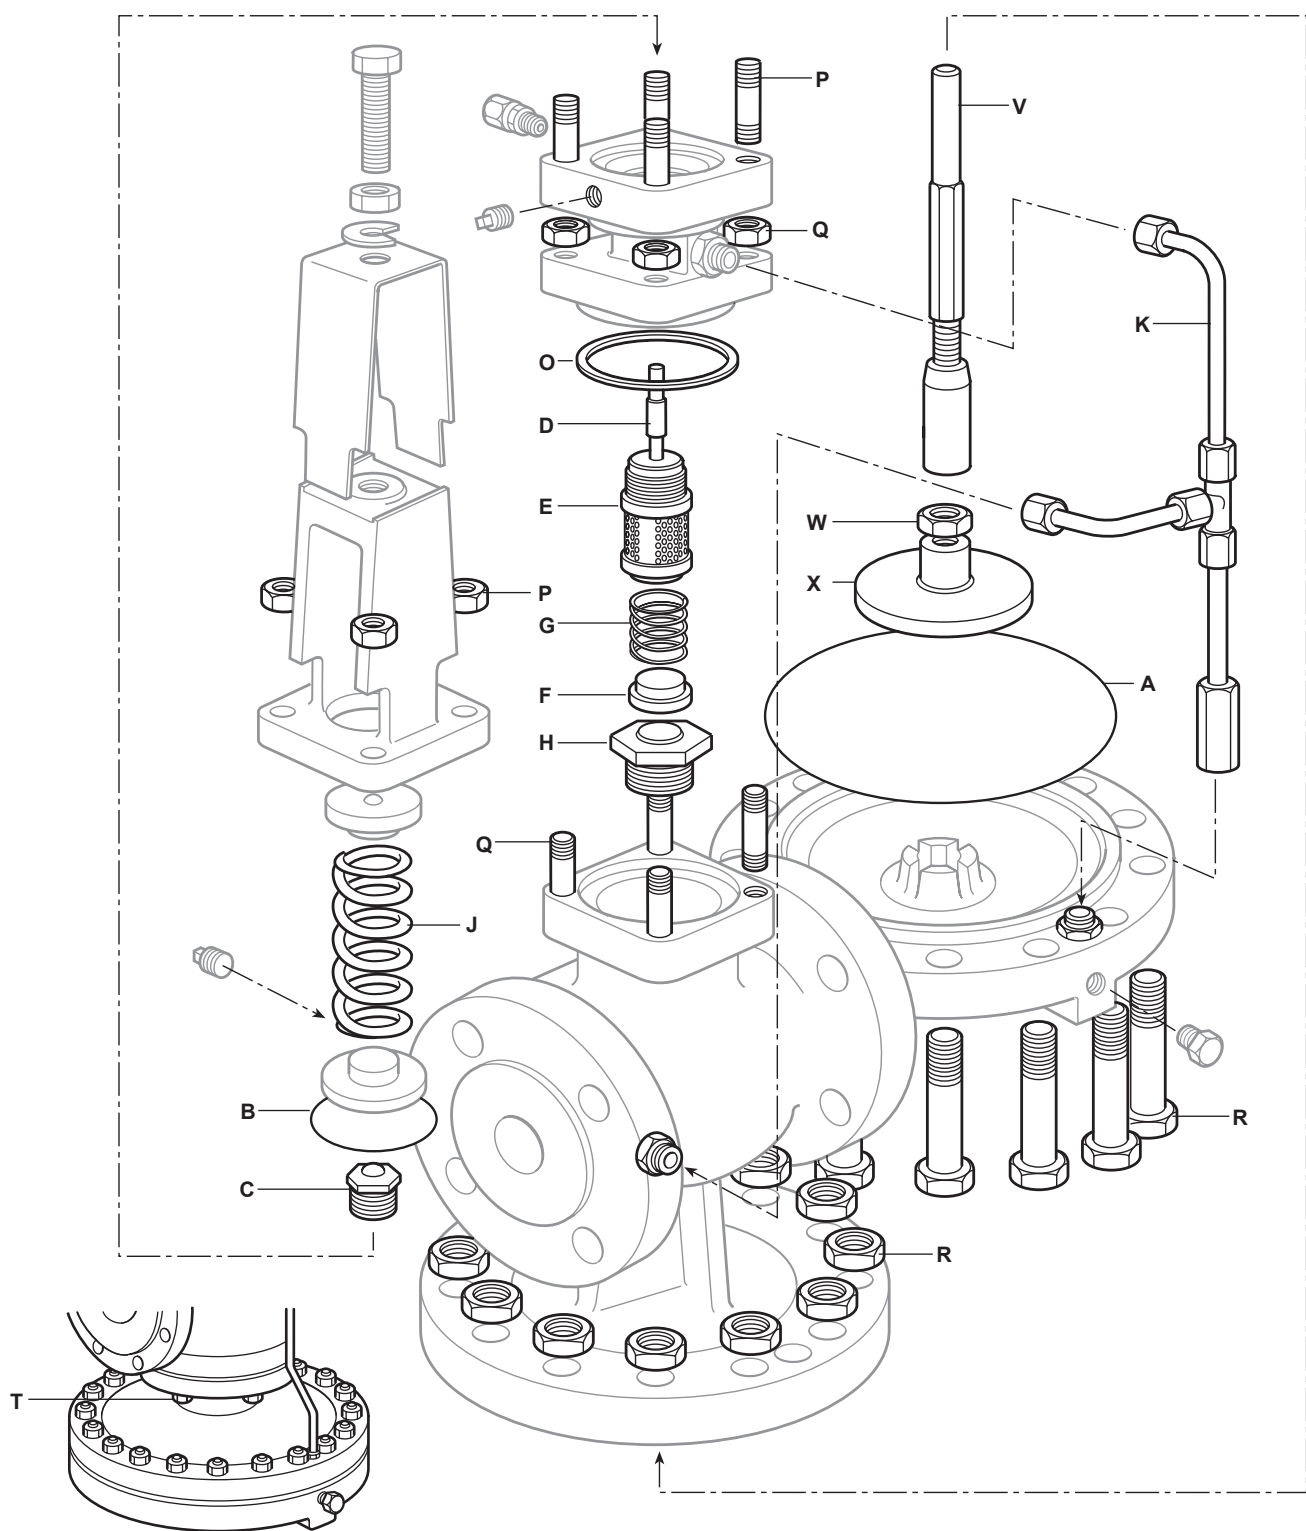

arrangement of main diaphragm chamber DN80 size only.

4

Control systems

Pressure reducing/surplussing valves

Interchangeability of spares
The following table shows how in certain sizes some parts are interchangeable. For example in the line headed 'Main diaphragm' the diaphragm used in the following sizes: DN15LC, DN15 and DN20 is common to these sizes by the letter 'a'. The letter 'b' indicates that sizes DN25 and DN32 use one common diaphragm.

Some parts, particularly pilot and main valve assemblies are specific to particular models e.g 'SDP' 'G'. Interchangeability is therefore restricted to model type for some parts.

† Please note for storage purposes: The spare parts marked † are not of the same material as those for the DP143 and DP163, consequently, they are not compatible for interchangeability.

Size		DN15LC	DN15	DN20	DN25	DN32	DN40	DN50	DN80
Main diaphragm		a	a	a	b	b	c	c	d
Pilot diaphragm		a	a	a	a	a	a	a	a
Pilot valve seal assembly		a	a	a	a	a	a	a	a
Pilot valve and plunger assembly		a	a	a	a	a	a	a	a
Main valve assembly		a	b	c	d	e	f	g	h
Main valve return spring		a	a	a	b	b	c	c	d
Pressure adjustment spring		a	a	a	a	a	a	a	a
Control pipe assembly	†	a	a	b	c	d	e	f	g
Body gasket	†	a	a	a	b	b	c	c	d
Set of spring housing securing studs and nuts	†	a	a	a	a	a	a	a	a
Set of pilot valve housing securing studs and nuts	†	a	a	a	b	b	c	c	d
Set of diaphragm chamber securing bolts and nuts	†	a	a	a	b	b	c	c	d
Set of main body studs and nuts	†	-	-	-	-	-	-	-	a

4.6

126