YDAC INTERNATIONAL



Bladder Accumulators Standard model

DESCRIPTION

1.1. FUNCTION

Fluids are practically incompressible and cannot therefore store pressure energy.

The compressibility of a gas is utilised in hydraulic accumulators for storing fluids. HYDAC bladder accumulators are based on this principle, using nitrogen as the compressible medium.

A bladder accumulator consists of a fluid section and a gas section with the bladder acting as the gas-proof separation element.

The fluid around the bladder is connected to the hydraulic circuit so that the bladder accumulator draws in fluid when the pressure increases and the gas is compressed.

When the pressure drops, the compressed gas expands and forces the stored fluid into the circuit.


HYDAC bladder accumulators can be used in a wide variety of applications, some of which are listed below:

- energy storage
- emergency operation
- force equilibrium
- leakage compensation
- volume compensation
- shock absorption
- vehicle suspension
- pulsation damping

See catalogue section:

 Hydraulic Dampers No. 3.701

1.2. DESIGN

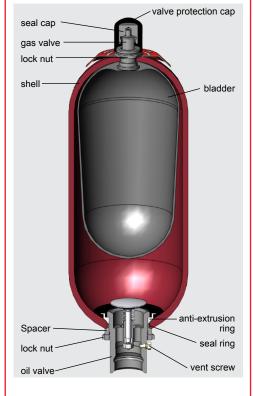

Design

Standard bladder accumulator SB330/400/500/550

HYDAC standard bladder accumulators consist of the pressure vessel, the flexible bladder with gas valve and the hydraulic connection with check-valve. The pressure vessels are seamless and manufactured from high tensile steel.

Bladder accumulator **SB330N**

The flow-optimised design of the standard oil valve enables the maximum possible operating fluid flow rate to increase to 25 l/s on this accumulator type.

High flow bladder accumulator SB330H

HYDAC high flow bladder accumulators type SB330 are high performance accumulators with a flow rate of up to 30 l/s. The fluid port is enlarged to allow higher flow rates.

● SB600

For higher pressures, with ASME U stamp, HYDAC provides the series SB600 with approval S (p_{max} 345 bar / 5000 psi).

1.3. BLADDER MATERIAL

The bladder material must be selected in accordance with the particular operating medium or operating temperature, see section 2.1.

If discharge conditions are unfavourable (high p₂/p₀ pressure ratio, rapid discharge speed), the gas may cool to below the permitted temperature. This can cause cold cracking. The gas temperature can be calculated using the HYDAC Accumulator Simulation Program ASP.

1.4. CORROSION **PROTECTION**

For operation with chemically aggressive media, the accumulator shell can be supplied with corrosion protection, such as chemical nickel-plating. If this is insufficient, then stainless steel hydraulic accumulators must be used.

1.5. INSTALLATION **POSITION**

HYDAC bladder accumulators can be installed vertically, horizontally and at a slant. When installing vertically or at a slant, the oil valve must be at the bottom. On certain applications listed below, particular positions are preferable:

- Energy storage: vertical
- Pulsation damping: any position from horizontal to vertical
- Maintaining constant pressure: any position from horizontal to vertical
- Volume compensation: vertical

If the installation position is horizontal or at a slant, the effective fluid volume and the maximum permitted flow rate of the operating fluid are reduced.

1.6. TYPE OF INSTALLATION

By using an appropriate adapter, HYDAC hydraulic accumulators, up to size 1 l, can be installed directly inline.

For strong vibrations and volumes above 1 litre, we recommend the use of HYDAC support clamps or the HYDAC accumulator installation set.

See catalogue sections:

- Supports for Hydraulic Accumulators No. 3.502
- ACCUSET SB No. 3.503



EN 3.201.30/06.18

2.1. EXPLANATIONS, NOTES

2.1.1 Operating pressure

see tables in section 3. (PED)

May differ from nominal pressure for other test certificates.

2.1.2 Permitted operating temperature of the hydraulic accumulator

-10 °C ... +80 °C

standard design, others on request

2.1.3 Nominal volume

see tables in section 3.

2.1.4 Effective gas volume

see tables in section 3.

Based on nominal dimensions, this differs slightly from the nominal volume and must be used when calculating the effective fluid volume.

2.1.5 Effective volume

Volume of fluid which is available between the operating pressures p2 and p1.

2.1.6 Max. flow rate of the operating fluid

In order to achieve the max. flow rate given in the tables, the accumulator must be installed vertically. It must be noted that a residual fluid volume of approx. 10 % of the effective gas volume remains in the accumulator.

The maximum fluid flow rate was determined under specific conditions and is not applicable in all operating conditions.

2.1.7 Working temperature and operating medium

The permitted working temperature of a bladder accumulator is dependent on the application limits of the metal materials and the bladder. Outside this temperature range, special materials must be used. The operating medium must also be taken into account.

The following table displays a selection of elastomer materials including max. temperature range and a rough overview of resistant and non-resistant fluids. Please contact us for help in selecting a suitable elastomer.

Materi	als	Material	Temperature range	Overview of the fluids 2)			
		code 1)		Resistant to	Not resistant to		
NBR	Acrylonitrile butadiene	2	-15 °C + 80 °C	Mineral oil (HL, HLP) Flame-retardant fluids from the	Aromatic hydrocarbons Chlorinated hydrocarbons		
	rubber	5	-50 °C + 50 °C	groups HFA, HFB, HFC Synthetic esters (HEES) Water	(HFD-S)◆ Amines and ketones◆ Operating fluids from the group		
		9	-30 °C + 80 °C	Sea water	HFD-R ● Fuels		
ECO	Ethylene oxide epichlorohydrin rubber		-30 °C +120 °C	Mineral oil (HL, HLP) Flame-resistant fluids from the group HFB Synthetic esters (HEES) Water Sea water	 Aromatic hydrocarbons Chlorinated hydrocarbons (HFD-S) Amines and ketones Operating fluids from the group HFD-R Flame-resistant fluids from the groups HFA and HFC Fuels 		
IIR	Butyl rubber	4	-50 °C +100 °C	Operating fluids of type HFD-R Flame-resistant fluids from the group HFC Water	 Mineral oils and mineral greases Synthetic esters (HEES) Aliphatic, chlorinated and aromatic hydrocarbons Fuels 		
FKM	Fluorine rubber	6	-10 °C +150 °C	 Mineral oil (HL, HLP) Hydraulic fluids from the group HFD, Synthetic esters (HEES) Fuels Aromatic hydrocarbons Inorganic acids 	 Amines and ketones Ammonia Skydrol and HyJet IV Steam 		

¹⁾ see section 2.2. Model code, material code, accumulator bladder

2.1.8 Gas charging

Hydraulic accumulators must only be charged with nitrogen. Never use other gases.

Risk of explosion!

In principle, only use nitrogen of at least Class 4.0 (filtration $< 3 \mu m$). If other gases are to be used, please contact us for advice.

2.1.9 Limits for gas pre-charge pressure $p_0 \le 0.9 \bullet p_1$

with a permitted pressure ratio of: $p_2 : p_0 \le 4 : 1$

 p_2 = max. operating pressure p_0 = pre-charge pressure

2.1.10 Certificate codes

Country	Certificate code (AKZ)
EU member states	U
Australia	F 1)
Belarus	A6
Canada	S1 1)
China	A9
Hong Kong	A9
Iceland	U
Japan	Р
Korea (Republic)	A11
New Zealand	T
Norway	U
Russia	A6
South Africa	S2
Switzerland	U
Turkey	U
Ukraine	A10
USA	S

¹⁾⁼ registration required in the individual territories or provinces others on request

On no account must any welding, soldering or mechanical work be carried out on the accumulator shell. After the hydraulic line has been connected it must be completely vented.

Work on systems with hydraulic accumulators (repairs, connecting pressure gauges etc.) must only be carried out once the pressure and the fluid have been released.

The operating instruction must be observed! No. 3.201.BA

Notice:


Application examples, accumulator sizing, instructions and extracts from approvals and transport regulations relating to hydraulic accumulators can be found in the following catalogue section:

 HYDAC Accumulator Technology No. 3.000

2.1.11 Gas-side connection standard model


Series	Volume [I]	Gas valve type		
SB330 /	< 1	5/8-18UNF		
SB400	< 50	7/8-14UNF		
	≥ 50	M50x1.5 / 7/8-14UNF		
SB500 / SB600	10 50	M50x1.5 / 7/8-14UNF		
SB550	1 5	7/8-14UNF		

other pressure ranges on request

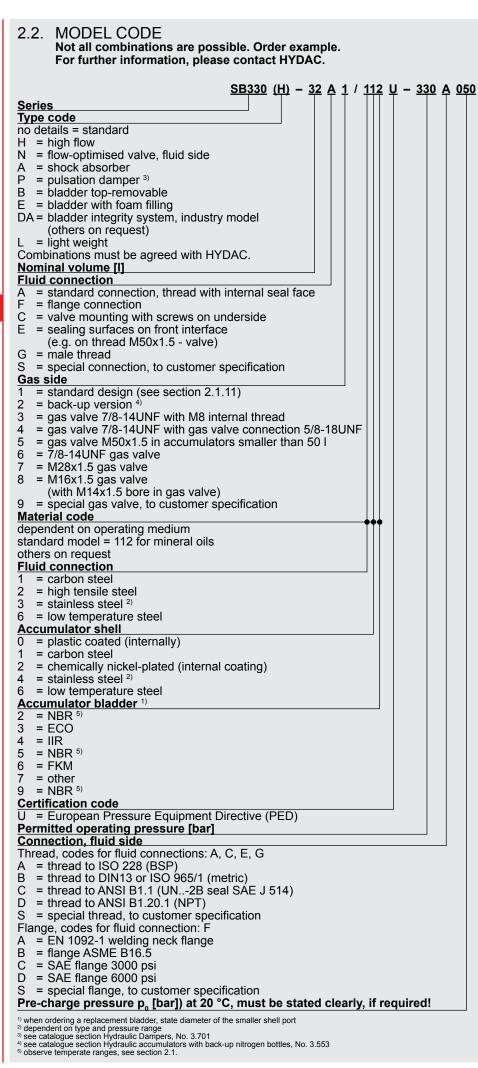

3. **DIMENSIONS AND** SPARE PARTS

3.1. DIMENSIONS

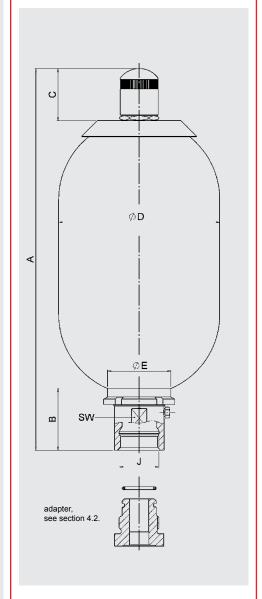


www.rodavigo.net +34 986 288118 Servicio de Att. al Cliente

	Series	May	onerating n	raccur	·	Eff. gas	Α	W	С	ØD	T ₁	ØE	SW	Q 1)	Weight
volume	Series	ies Max. operating pressure Certificate code Certificate code		volume	max.	VV		max.	Thread	שב	SVV	Q "	vveigni		
		(AKZ		(AKZ											
[I]		1.	Part no.	[bar]	Part no.	[[]]	[mm]	[mm]	[mm]	[mm]	ISO 228	[mm]	[mm]	[l/s]	[kg]
0.5	SB400	400	3047163	_	_	0.5	270	57	33.5	96	G 3/4	50	32	4	4
,	SB330	330	3047162	_	_	,	316	57		115	G 3/4	50	32	4	7
1	SB550	550	3110531	_	_	1	343	67	56	123	G 1	67	45	6	10
	SB330	330	3047165	-	_	2.4	528	64		115	G 1 1/4	07	50	10	11
2.5	SB550	550	3068916	_	_	2.5	550	67	56	123	G 1	67	45	6	14
4	SB330	330	3047166	-	_	0.7	440	0.5	50	470	0.4.4/4	07		40	45
4	SB400	400	3017905	-	_	3.7	412	65	56	170	G 1 1/4	67	50	10	15
5	SB550	550	3090654	_	_	4.9	876	64	56	123	G 1	67	45	6	17
6	SB330	330	3047168	-	_	5.7	534	65	56	170	G 1 1/4	67	50	10	18
10 ²⁾	SB330	330	3047170	-	_	9.3	810	65	56	170	G 1 1/4	67	50	10	31
	SB330		3047172	262	3141237		500	404			0.0	400		15	33
	SB330N	330	3156632	-	_	9.3	582	101		229	G 2	100	70	25	34
40	SB330H		3079081	-	_	9	617	136	56		G 2 1/2	125	90	30	38
10	SB400	400	3107393	_	_	9.3	578			234					41
	SB500	500	3130252	_	_	8.8	500	101		0.4.4	G 2	100	70	15	40
	SB600	_	_	345	332265		598	598	69	241					46
	SB330		3047173	_	_						1.22		15	46	
	SB330N	330	_	_	_	i	695	101		229	G 2	100	70	25	47
13	SB330H		_		_	12	730	136	56		G 2 1/2	125	90	30	45
	SB400	400	_	_	_	1	695	101	234	234	G 2	100	70	15	49
	SB330		3047174	262	3117153	18.4	1						15		
	SB330N	330	3162982		_		895	101	EC	229	G 2	100	70	25	49
	SB330H		3092659	_	_	17.5	930	136	56		G 2 1/2	125	90	30	62
20	SB400	400	3115007	_	_	18.4	895			234		100	70		71
	SB500	500	3118156	_	_			101		011	G 2	110	75	15	77
	SB600	 	_	345	332266	17	913		69	241					77
	SB330		3047175	_	_		1							15	72
24	SB330N	330	_	_	_	23.6	1060	101	56	6 229	G 2	100	70	25	73
	SB330H		_	_	_	24	1095	136			G 2 1/2	125	90	30	76
	SB330		3047176	262	3117154									15	80
	SB330N	330	3220899	_	_	33.9	1410	101		229	G 2 100	100	70	25	81
	SB330H		3059515		_	32.5	1445	136	56		G 2 1/2	125	90	30	98
32	SB400	400	3125141	290	_	33.9	1410			234		100	70		104
	SB500	500	3760577	_	_			101			G 2			15	
	SB600	_	_	345	332267	33.5	1423		69	241		110	75		112
	SB330		3047177	262	362904		4000	404			0.0	460	70	15	114
	SB330N	330	3185604	-	_	1	1933	101		229	G 2	100	70	25	115
50	SB330H	1	3089605	-	_	47.5	1968	136	00		G 2 1/2	125	90	30	128
50	SB400	400	3114662	-	_	1			69	234			70		137
	SB500	500	3130253	<u> </u>	_	40.0	1933	101		0.4.1	G 2	100	7.	15	
	SB600	1-	_	345	332268	48.3				241			75		167
60	SB330	330	3341217	_	_	60	1210	138	69	360	G 2 1/2	125	90	30	160
80	SB330	330	_	_	_	85	1460	138	69	360	G 2 1/2	125	90	30	200
100	SB330	330	3098489	_	_	105	1710	138	69	360	G 2 1/2	125	90	30	234
130	SB330	330	_	_	_	133	2030	138	69	360	G 2 1/2	125	90	30	283
160	SB330	330	_	_	_	170	2059	137	69	410	G 2 1/2	125	90	30	345
						201	2359	137	69		G 2 1/2	125	90		

¹⁾ Q = max. flow rate of the operating fluid under optimum conditions 2) slimline version, for confined installation spaces

3.2. SPARE PARTS SB330/400/500/550/600 SB330H / SB330N 14 15 9-13 16 19 17 20

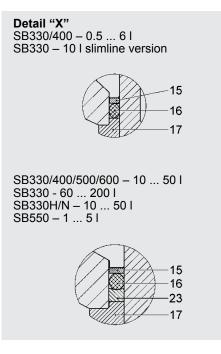

Description	Item
Bladder assembly 1)	
consisting of:	
Bladder	2
Gas valve insert*	3
Lock nut	4
Seal cap	5
Protective cap	6
O-ring	7
Seal kit	
consisting of:	
O-ring	7
Washer	15
O-ring	16
Vent screw	19
Support ring	23
O-ring	27
Repair kit 1)	
consisting of:	
Bladder assembly (see above)	
Seal kit (see above)	
Oil valve assembly	
consisting of:	
Valve	9-13
Anti-extrusion ring*	14
Washer	15
O-ring	16
Spacer	17
Lock nut	18
Vent screw	19
Support ring	23
* available concretely	

available separately

25

when ordering, please state diameter of the smaller shell port

Accumulator shell (item 1) and company label (item 8)

not available as a spare part
Vent screw (item 19) for NBR/carbon steel: seal ring (item 20) included

Adapter (item 25) incl. O-ring (item 27) available as an accessory, section 4.

SB330/400
NBR, carbon steel
standard gas valve

	,	,	,
Volume [l]	Bladder assembly	Seal kit	Repair kit
0.5	365263	353606	2128169 ²⁾
1	237624	333000	2106261
2.5	236171		2106200
4	236046		2106204
5	240917	353609	2106208
6	2112097		2112100
10*	2127255 1)		3117512 ¹⁾
10	236088	353621	2106212
13	376249		2106216
20	236089		2106220
24	376253		2106224
32	235335		2106228
50	235290		2106252
60	3364274		3117513
80	3364312		3117514
100	3127313	3102043 1)	3117515
130	3201384	3102043 "	3117516
160	3184769		3117517
200	3461300		3117558

Volume	Oil valve	Anti-extru-	Gas valve	
<u>[l]</u>	assembly	sion ring	insert	
0.5	2102355	2105411		
1	2102333	2100411		
2.5	236045	2105431		
4	238523	2105451		
5	236045	2105431		
6	238523	2105451		
10*	230323	2100401		
10		2105491	632865	
13				
20	352572			
24	332372			
32				
50				
60				
80				
100	3273734	3102326		
130	32/3/34	3102320		
160				
200				

- * slimline version, for confined installation spaces
 1) only for SB330
 2) only for SB400
 others on request

When replacing seals and/or bladders, please read the Instructions for Assembly and Repair (No. 3.201.M).

ACCESSORIES FOR BLADDER 4. **ACCUMULATORS**

4.1. ADAPTERS (GAS SIDE)

The adapters shown below are available for standard connections on bladder accumulators and must be specified separately in the


Adapter for safety devices

Adapter for connecting safety devices, such as burst disc or temperature fuse, see brochure section:

 Safety Equipment for Hydraulic Accumulators No. 3.552

4.1.2 Pressure gauge model

Gas-side connection on the bladder accumulator for permanent monitoring of the pre-charge pressure

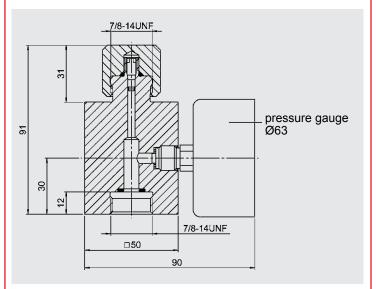


Pressure gauge	Adapter* assembly
Part no.	Part no.
-	366621
614420	2108416
606886	3093386
606887	2104778
606888	3032348
606889	2100217
606890	2102117
	Part no. - 614420 606886 606887 606888 606889

^{*} p_{max}= 400 bar

4.1.3 Pressure gauge model with shut-off valve

Gas side connection on the bladder accumulator for permanent monitoring of the pre-charge pressure with shut-off option.

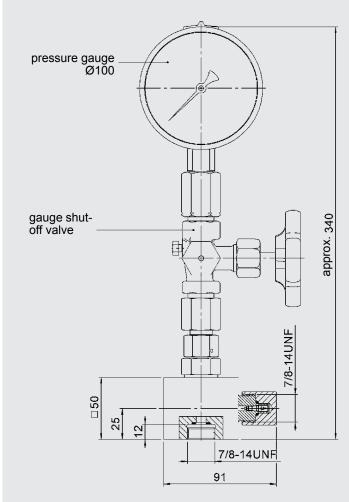


Gauge	Pressure gauge	Adapter* assembly
indication range	Part no.	Part no.
_	_	2103381
0 - 25 bar	617928	3784725
0 - 60 bar	606771	2110059
0 - 100 bar	606772	3139314
0 - 160 bar	606773	3202970
0 - 250 bar	606774	3194154
0 - 400 bar	606775	2103226

^{*} p_{max}= 400 bar

To monitor the pre-charge pressure in hydraulic accumulators remotely, gas-side adapters with pressure gauge and mounting holes are available.

In order to connect these adapters directly to the hydraulic accumulator using appropriate lines, accumulator connectors are also available for connection at the top (see figure 1) or for sideconnection (see figure 2).

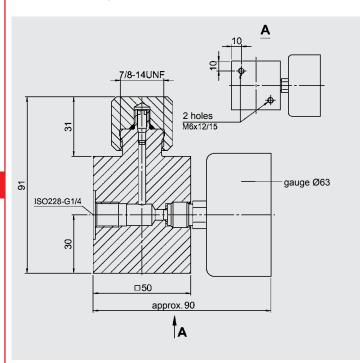

Gauge	Pressure gauge	Adapter* assembly
indication range	Part no.	Part no.
_	_	3037666
0 - 10 bar	614420	3095818
0 - 60 bar	606886	3095819
0 - 100 bar	606887	3095820
0 - 160 bar	606888	3095821
0 - 250 bar	606889	3095822
0 - 400 bar	606890	3095823

^{*} p_{max}= 400 bar

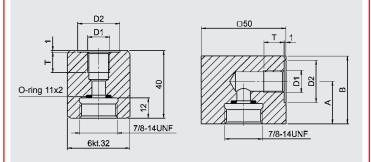


Figure 1


Figure 2

D1 Threaded connection	D2 [mm]	T [mm]	A [mm]	B [mm]	Adapter* assembly Part no.	Figure
ISO 228 - G 1/4	25		-	-	2109481	1
130 220 - 0 1/4		14	25	40	2102042	2
ISO 228 - G 3/8	28		-	-	2109483	1
13U 220 - G 3/0			25	40	366607	2
ISO 228 - G 1/2	34	16	-	-	2110636	1
130 220 - 6 1/2	34	10	31	55	366608	2

^{*} p_{max}= 400 bar

4.2. ADAPTERS FOR STANDARD BLADDER ACCUMULATOR (FLUID SIDE)

to connect the bladder accumulator to threaded pipe fittings. These are available separately.

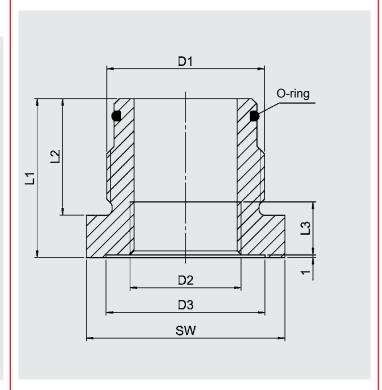

D1	D2	D3	L1	L2	L3	SW	O-ring	Part no.
Accum. conn.*								
ISO 228 - BSP	ISO 228 - BSP	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	NBR/ Carbon steel
G 3/4	G 3/8	28	55	28	12 32 17x3	1772	2104346	
	G 1/2		60	14	14	36	1733	2104348
G 1 1/4	G 3/8	28	50	37	12	46	30x3	2116345
	G 1/2	34			14			2105232
	G 3/4	44			16			2104384
	G 1	50	67		18	65		2110124
G 2	G 1/2	34	60	44	14	65	48x3	2104853
	G 3/4	44			16			2104849
	G 1	50			18			2124831
	G 1 1/4	60			20			2107113
	G 1 1/2	68			22	70		2105905
G 2 1/2	G 1 1/4	60	66 88	50	20	80	62x4	2127406
	G 1 1/2	68			22			3243831
	G2	96			27	100		2113403

^{*} others on request

5. NOTE

The information in this brochure relates to the operating conditions and fields of application described. For fields of application and operating conditions not described, please contact the relevant technical department. Subject to technical modifications.

HYDAC Technology GmbH

Industriegebiet

66280 Sulzbach/Saar, Germany

0049 (0) 68 97 / 509 - 01 0049 (0) 68 97 / 509 - 464 Internet: www.hydac.com

E-mail: speichertechnik@hydac.com